

ENGLISH

Operating Instructions
Please read and observe the following information and keep the operating manual nearby for future reference!

WARNING!

Safety information

- ➔ Risk of explosion!
- ➔ Only use the power adapter plugs supplied!
- ➔ Only use batteries supplied or ones of the same type!
- ➔ Always treat batteries with due care and attention and only use batteries as described.
- ➔ Never use standard and rechargeable batteries together. Never use rechargeable batteries or standard batteries with different capacities or charge statuses together. Never use standard or rechargeable batteries which are damaged.
- ➔ Risk of suffocation through small objects, packaging and protective foil!
- ➔ Keep children away from the product and its packaging!
- ➔ Risks to health and the environment from batteries!
- ➔ Never open, damage or swallow batteries or allow them to pollute the environment. They could contain toxic and ecologically harmful heavy metals.

CAUTION!

- ➔ Risk of hearing damage!
- ➔ Avoid listening at full receiver volume.

ATTENTION!

- ➔ Risk of property damage.
- ➔ Prevent exposure to environmental influences, e.g. smoke, dust, vibration, chemicals, moisture, heat and direct sunlight.
- ➔ Only allow repairs to be completed by qualified personnel.

i Contact your telephone network provider with regard to enabling supplementary services.

INTENDED USE

The telephone is suitable for telephoning within a public telephone network system. Any other use is considered unintended use. Observe all local directives and regulations. Unauthorised modification or reconstruction is not permitted. Under no circumstances open the device or complete any repair work yourself.


PACKAGE CONTENTS

- 1 Base station, 1 Telephone connection cable, 1 Operating instruction

OPERATING ELEMENTS

- 1 Direct call photo keys
- 2 Direct call keys
- 3 Store button, press to store number
- 4 Mute button
- 5 R-key (Flash)
- 6 Redial button
- 7 Boost function (+40dB)
- 8 Handsfree ON
- 9 LED
- 10 Volume control receiver
- 11 Volume control handset
- 12 Tone control
- 13 Ringer switch

CONNECTION

1. Connect the curly cord to the handset and to the socket marked  on the top side of the telephone.
2. Connect the telephone line cord of telephone on the underside of the telephone, and then to a network wall socket.
3. Position the telephone line cable in the groove underneath the telephone.
4. Lift the handset and listen for the dial tone.

OPERATION

Using the telephone

1. Lift the handset and wait until you hear the dial tone.
2. Using the keypad, press the telephone number you wish to dial or press the photo of the person you wish to call.
3. To end the call simply replace the handset. You can adjust the desired receiver volume by using the button on side of the telephone.


Receiving calls

When you receive a call you will hear the telephone ring. The call can now be accepted by lifting the handset.


Recall

Press the recall button **R** followed by the extension number to transfer calls when connected to a PBX (TBR only).
Access to additional network services can be gained by using the recall button **R**, * and # buttons. Contact your network operator for more information.

Ringer Switch

Use the button  to adjust the ringer volume to OFF/LOW/HI.

Amplification & Receiver volume control

The receiver volume can be boosted up to +40dB max during a conversation. Press the **+40dB button**, and the Boost LED will light.
You can increase the handset volume by turning the volume control  (located under the handset) to the listening level (1-4).

You can turn **OFF** the **BOOST** by pressing the **RED +40dB button** at any time during your conversation, the **BOOST LED** will turn off and the volume will return to normal level. After the call, when you replace the handset to the cradle, the boost volume will be reset to normal automatically.




Note: If you do not need this additional amplification you do not need to press the **RED +40dB boost Button**.

Warning: Setting your earpiece volume too high can damage your hearing!!!


 
Tone control

When the volume has been boosted up, you can also adjust the tone control with the **Tone** switch. Adjust the sound frequency to suit your hearing needs.


Hands free function

1. Press . The Hands free speaker will be activated and the Hands free indicator will illuminate.
2. Dial the required telephone number. The speaker volume can be adjusted during a call using .
3. Speak towards the microphone located on the front edge of the telephone.
4. Press  to terminate the call.


Please note!

During a conversation, you can switch from the handset to hands free mode at any time by pressing . Press  again to terminate the call.
Please remember that in Hands free mode it is only possible for one person at a time to talk. The switch between speaker and microphone is automatic and dependent on the sound level of the incoming call and the microphone respectively. It is therefore essential that there are no loud noises, e.g. music, in the immediate vicinity of the telephone, as this will disrupt the speaker function.

Mute function

Pressing the **Mute Button**  will switch off the receiver microphone, and the other side will not hear anything.

Redial

Redial allows you to call the last dialled phone numbers(up to 32 digits). Lift the handset and press  to dial the last dialed phone number.



R button on private branch exchanges

 
If the telephone is connected to a private branch exchange, functions such as transferring calls and automatic call back can be used via the **R** button. *Please refer to the operating manual supplied with your private branch exchange to determine, whether the telephone will work properly with the exchange.*

Memory Dialing

This telephone has **6 one touch memory photo buttons**. A picture or symbol can be placed under the transparent cover on the speed dial buttons, so it's easy to see who you are calling. Once a number has been stored in a memory location, you only need to press one button to make the call.

Storing One-touch Memory Buttons

1. Lift the handset.
2. Press the  button.
3. Enter the telephone number to be stored.
4. Press the  button again.
5. Press **Memory Button M1-M4** or one of the **6 Photo Buttons** to store the number.
6. Replace the handset.

NOTE: Press the  button if you need to insert a pause in the telephone number.

Dialing using one-touch Memory Buttons

1. Lift the handset and wait for a dial tone.
2. Press the **Memory Button M1-M4** or one of the **6 Photo Buttons**, and the stored telephone number will be dialed.

Service hotline

In the case of technical problems, contact our Service hotline. Switzerland: Tel. 0900 00 1675 (national charges, Swisscom at time of going to print: CHF 2.60/min). In the case of claims under the terms of guarantee, contact your sales outlet.

Maintenance


 

Clean the surface of the housing with a soft, fluff-free cloth. Do not use any cleaning agents or solvents.

Guarantee


SWITEL equipment is produced and tested according to the latest production methods. The implementation of carefully chosen materials and highly developed technologies ensure trouble-free functioning and a long service life. The terms of guarantee do not apply when a device malfunction was caused by the mobile telecommunications network operator/provider. The terms of guarantee do not apply to the batteries or power packs used in the products. The period of guarantee is 24 months from the date of purchase. All deficiencies related to material or manufacturing errors within the period of guarantee will be redressed free of charge. Rights to claims under the terms of guarantee are annulled following tampering by the purchaser or third parties. Damage caused as the result of improper handling or operation,

normal wear and tear, incorrect positioning or storage, improper connection or installation or Acts of God and other external influences are excluded from the terms of guarantee. In the case of complaints, we reserve the right to repair defective parts, replace them or replace the entire device. Replaced parts or devices become our property. Rights to compensation in the case of damage are excluded where there is no evidence of intent or gross negligence by the manufacturer. If your device does show signs of a defect within the period of guarantee, please contact the sales outlet where you purchased the SWITEL device, producing the purchase receipt as evidence. All claims under the terms of guarantee in accordance with this agreement can only be asserted at the sales outlet. No claims under the terms of guarantee can be asserted after a period of two years from the date of purchase and hand-over of the product.

Disposal

-  In order to dispose of your device, take it to a collection point provided by your local public waste authorities (e.g. recycling centre).
-  According to the laws on the disposal of electronic and electrical devices, owners are obliged to dispose of old electronic and electrical devices in a separate waste container. The adjacent symbol indicates that the device must not be disposed of in normal domestic waste!
-  You are legally obliged to dispose of power packs and batteries at the point of sale or in the corresponding containers provided at collection points by local public waste authorities. Disposal is free of charge. The symbols indicate that the batteries must not be disposed of in normal domestic waste and that they must be brought to collection points provided by local public waste authorities. Packaging materials must be disposed of according to local regulations.

Declaration of Conformity

 This device fulfils the requirements stipulated in the Directive 1999/5/EC on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity. Conformity with the above mentioned directive is confirmed by the CE mark on the device. To view the complete Declaration of Conformity, please refer to the free download available on our website www.switel.com.

Technical data (All rights reserved)

Feature	Value
TF540	
W x H x D	180x205x86mm
Weight	737g
Flash Time	100/300/600 mS